



PRODUCT CARD

General description

Certified, modern and compact. **BAM brand car multicooker-rice cooker**It's the perfect solution for the driver's cab on the road, for truck and van drivers, and for camping. It allows for fully automatic preparation of a healthy, hot meal for several people without access to a traditional kitchen. It features a non-stick interior coating and a set of certificates guaranteeing food contact safety. [2]

Technical specifications

- **So:** B.A.M.
- **Product symbol:**AKC086
- **EAN code:** 5902315125438
- **Supply voltage:**12V / 24V DC (automatic adjustment)
- **Rated power:**120W (at 12V) / 200W (at 24V)
- **Bowl capacity:**2.0 liters
- **Power connector:**Car cigarette lighter socket
- **Device weight:** 2,56 kg [2]

Kit contents

1. Main device Multicooker BAM 2L
2. Removable pot with non-stick coating (SGS)
3. Car cigarette lighter power cord (12/24V)
4. Additional accessories (measuring cup, spoon, steaming tray)
5. User manual in Polish [2]

Certificates and safety standards

- **SGS Food-Grade:**Guarantee of full safety and food contact approval for the non-stick coating.
- **CE-EMC:**Electromagnetic compatibility certificate (no interference with CB radio or GPS navigation).
- **CE-LVD:**Low voltage safety certificate for electrical equipment.

USER MANUAL

Designated operating modes (6 automatic programs)

1. **Fast cooking:**Maximum power consumption for quickly boiling water, rice or heating a one-pot meal.
2. **Delicate cooking:**Mode that reduces the risk of burning, balanced temperature for light, low-fat vegetable and meat dishes.
3. **Multi-grains (Cereals/Rice):**A dedicated program for cooking loose rice, groats, lentils or chickpeas to perfect softness.
4. **Porridge:**Optimized for thick dairy and cereal dishes; prevents porridges and gruels from boiling over.
5. **Baby porridge (Children's meals):**Gently heating to a temperature safe for children, preparing porridges without losing nutritional value.
6. **Soup:**Long, slow cooking (slow cook function), ideal for deep-flavored soups and tenderizing tougher cuts of meat.

Additional functions of the control panel

- **TIMER function (Delayed start):**Allows you to program the time at which the device should automatically start the cooking process.
- **KEEP WARM function:**Once the selected program is complete, the device automatically switches to keep warm mode to keep the meal always ready for consumption.

Step-by-step instructions (First and daily use)

1. **Preparation:**Remove the inner bowl and wash it in warm water with a mild dish soap. Wipe the outside of the bowl dry.
2. **Loading:**Place ingredients in the bowl. Do not exceed the maximum level mark (MAX) inside the pot.
3. **Installation:**Insert the bowl into the multicooker housing, turning it gently left/right to ensure it sits flush against the cooking plate. Close the lid tightly until the lock clicks into place.
4. **Connection:**Plug the power cable into the device's socket first, then into a working 12V or 24V car cigarette lighter socket. The device will beep and the display will illuminate.
5. **Program selection:**Press the mode selection button until the desired program is highlighted (e.g. *Soup* or *Fast cooking*). Confirm start.
6. **Completion of work:**Once cooked, you'll hear a beep and the appliance will enter keep-warm mode. Unplug the cigarette lighter plug before opening the lid.

Cleaning and maintenance

- Always wait for the appliance to cool down completely before cleaning.
- The inner bowl should be washed with a soft sponge. **It is forbidden** using steel wool and scouring powders that could damage the SGS protective coating.
- Only wipe the outer casing and the inside of the body (after removing the bowl) with a slightly damp cloth.

SAFETY INSTRUCTIONS (OHS)

Before operating the device, please read the following instructions carefully. Failure to follow these instructions may result in electric shock, fire, or burns!

1. Electrical installation safety

- The device is designed for DC power supply only **12V or 24V** from a working vehicle cigarette lighter socket. Never attempt to connect it to a traditional 230V mains socket without a dedicated converter.
- Make sure your vehicle's cigarette lighter socket is clean, dry and your car's fuse can handle the load. **15A–20A**(power consumption up to 200W).
- Do not use damaged power cords. Only replace the cord with an original spare part (e.g., the dedicated BAM [AKC127 cord](#)).

2. Safety while driving and parking

- It is **STRICTLY PROHIBITED for the driver to use the device while driving**. The multicooker may only be started when stationary (e.g. in a parking lot, campsite) or by a passenger in a way that prevents the device from moving during road maneuvers.
- The device must be placed on a stable, flat, and level surface during operation. Falling the device off the dashboard or cabin bed may result in severe burns from the hot liquid.
- It is recommended to use the device with the vehicle engine running or on working hotel batteries to avoid deep discharge of the starter battery (especially in 12V mode at 120W consumption). [2]

3. Burn and fire prevention

- During cooking, hot steam escapes from the steam valve in the lid. Keep your face and hands away from the outlet.
- Never open the lid abruptly during high-pressure programs (*Fast cooking, Soup*). First, disconnect the power and wait a moment for the temperatures to equalize.
- Do not turn on the multicooker if the inner bowl is empty – this may cause permanent damage to the heating element and melting of the housing.
- Do not cover the operating device with towels, clothes or other objects that obstruct ventilation.

4. Protection against moisture

- **DO NOT IMMERSE THE MAIN HOUSING IN WATER.** The device's body contains electronic components and a power socket. Submersion in water may cause a permanent electrical short circuit.