

PRODUCT DATA SHEET AND SAFETY MANUAL

For Car Electric Cookware (Frying Pans & Saucepans 12V/24V)
Models: AKC057, AKC058, AKC059, AKC060

This document serves as a collective product data sheet and safety (user) manual for electric tourist cookware placed on the market by the responsible entity.

1. Entity Placing the Product on the Market

Company Name: B.A.M. Andrzej Borowicz
Address: ul. Leśna 38, 86-031 Osielsko, Poland
Website: www.bam24.pl

2. Product Data Sheet

Symbol	Product Name	Voltage	Power	Diameter	EAN Code
AKC057	Car electric frying pan with lid CE	12V	150W	fi 20 cm	5901698869274
AKC058	Car electric frying pan with lid CE	24V	250W	fi 20 cm	5901698869281
AKC059	Car electric saucepan with lid CE	12V	150W	fi 18 cm	5901698869250
AKC060	Car electric saucepan with lid CE	24V	250W	fi 18 cm	5901698869267

2.1. Common Series Specifications

- Power Supply: Directly from the car cigarette lighter socket.
- Certification: CE mark confirming compliance with EU safety directives.
- Application: Cooking, frying, and reheating meals in vehicles (cars, trucks, campervans).
- Equipment: Glass/plastic lid included, power cord with integrated cigarette lighter plug.

3. Safety & Operating Instructions

3.1. Before First Use & Preparation

- Ensure the vehicle's electrical system voltage matches the device specifications (12V for AKC057/AKC059 and 24V for AKC058/AKC060). Connecting to an incorrect source can cause permanent damage.
- Check the technical condition of the power cord and plug. It is forbidden to use the product with damaged insulation.
- Place the cookware on a stable, flat, and level surface inside the vehicle while parked.

3.2. Safe Operation

- It is strictly forbidden to use the device while driving – risk of burns or accidents. Use only while stationary.
- Do not leave the device unattended while operating.
- It is recommended to run the device with the vehicle engine turned on to prevent complete battery drain.
- The surfaces become very hot during use. Touch only the designated insulated handles.
- Never operate the appliance empty (without food, oil, or water).

3.3. Post-Operation and Maintenance

- Always disconnect the plug from the cigarette lighter socket immediately after cooking.
- Allow the cookware to cool down completely before cleaning or storing.
- Cleaning: Do not submerge the cookware or electrical connectors in water. Wipe the interior with a damp cloth and mild detergent.

3.4. Absolute Prohibitions and Warnings

- **FORBIDDEN to modify the plug or power cord.**
- **FORBIDDEN to use metal utensils on the cooking surface (risk of damaging the non-stick coating).**
- Keep away from children and pets.